

 




## Sylvie

Sylvie is derived from the Latin word "Sylva" (forest), symbolizing that sound is as organic, pure and vibrant as nature.

She is an "acoustic guide" who loves music and technology, waiting to meet you in the digital world.

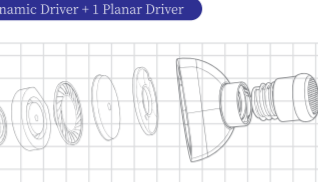

### To our dear explorers:

When you open this manual, it means you already own or are about to step into a brand-new acoustic dimension.

### Kinera Sylvie

It is more than just a pair of earphones; it is a cross-disciplinary fusion of acoustic engineering, industrial design and human-computer interaction.

We believe that sound should be free and boundless, and intelligence should feel warm and engaging.


Therefore, we have created the "third way of listening" — open-back high-fidelity smart earphones.

May Sylvie be your ears to explore the world, and may this manual be the key to understanding this "companion".

— Kinera Acoustics Lab

**Kinera Sylvie**  
User Guide

### 1 Dynamic Driver + 1 Planar Driver

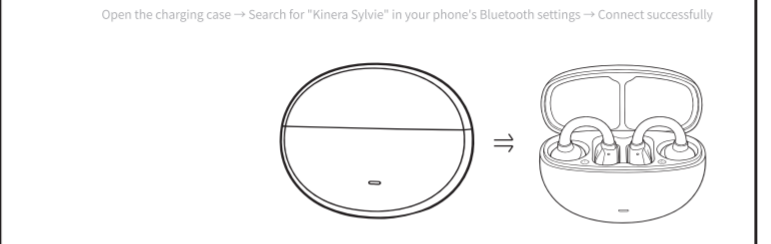

### 10mm Tesla diaphragm dynamic driver (low-mid frequencies)

Extremely high magnetic flux, exceptionally strong control. Solid bass extension, full and rich vocals, and immersive atmosphere.

### 7mm miniature planar diaphragm (high frequencies)

Ultra-lightweight, lightning-fast response. Silky smooth high-frequency extension, crystal-clear details, and precise instrument positioning.


## Quick Start Guide

Open the charging case → Search for "Kinera Sylvie" in your phone's Bluetooth settings → Connect successfully



## Installation and Wearing Guide

Select the silicone ear hooks of the appropriate size (three pairs of S/M/L are included) → Rotate and wear them until they are secure.

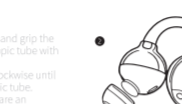

Hold the ear clip main body with one hand, and grip the sound nozzle (or the front end of the telescopic tube with the other hand). Slowly unscrew the sound nozzle counterclockwise until it is completely separated from the telescopic tube. If the sound nozzle and the telescopic tube are an integrated structure, unscrew the entire assembly. Note: Keep axial alignment during unscrewing to avoid jamming or damage caused by misaligned threads.

Take out the required sound nozzle (e.g., long-nozzle type, short-nozzle type) and check that its threads are clean and free of debris. Align the sound nozzle with the front end of the telescopic tube, gently screw it in clockwise, and continue tightening after confirming the threads are properly engaged. Stop when it feels securely fastened. Do not over-tighten, as excessive force may cause difficulty in future disassembly.

After installation, rotate the telescopic tube normally to adjust the overall extension length of the sound nozzle. Check that the sound nozzle and make sure dust-proof mesh cover are firm, without looseness or displacement. If abnormal sound occurs after replacement, reconfirm whether the nozzle is installed in place or check if the dust-proof mesh is blocked.

Remove the Original Sound Nozzle

Selecting and Installing a New Sound Nozzle

Selecting and Installing a New Sound Nozzle

Adjustment and Confirmation

Select the appropriately sized Final ear tips (SS/S/M) to ensure a secure fit and optimal sound quality.



Gently clip the earphone aligned with the ear canal and adjust to a comfortable angle.

Removing the Original Sound Nozzle

Selecting and Installing a New Sound Nozzle

Selecting and Installing a New Sound Nozzle

Adjustment and Confirmation

Select the appropriately sized Final ear tips (SS/S/M) to ensure a secure fit and optimal sound quality.



Gently clip the earphone aligned with the ear canal and adjust to a comfortable angle.

Removing the Original Sound Nozzle

Selecting and Installing a New Sound Nozzle

Selecting and Installing a New Sound Nozzle

Adjustment and Confirmation

## Touch Operation Guide


Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case



Touch Controls

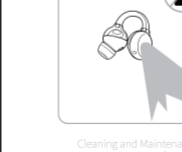


Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.

Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case

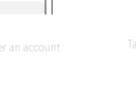

Touch Controls



Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.

Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case




Touch Controls



Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.

Power On: Automatically powers on when the charging case is opened

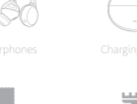

Power Off: Automatically powers off when placed into the charging case



Touch Controls



Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.


Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case



Touch Controls

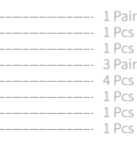


Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.


Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case

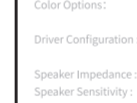

Touch Controls

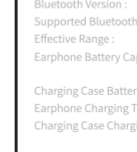

Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.

Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case



Touch Controls



Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.


Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case



Touch Controls

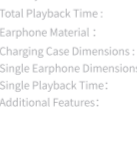

Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.


Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case




Touch Controls

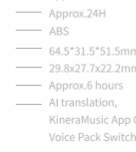

Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.

 Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case



Touch Controls




Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.


Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case

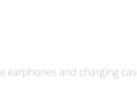

Touch Controls

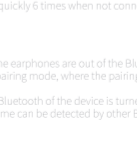


Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.

Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case

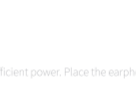

Touch Controls




Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.


Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case

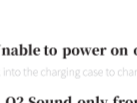

Touch Controls

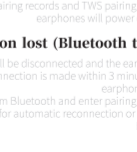

Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.


Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case



Touch Controls

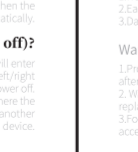


Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.


Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case

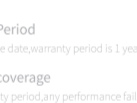

Touch Controls

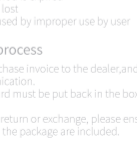

Function

Function	Operation
Answer Incoming Call	Single tap either earphone when a call comes in
End Call	Double tap either earphone during a call
Reject Incoming Call	Press and hold either earphone for about 2 seconds
Pause/Play	Single tap either earphone
Previous Track	Triple tap either earphone during playback
Next Track	Double tap either earphone quickly during playback
Volume +/Volume -	Controlled via the mobile phone
Reset to Factory Settings (Unpair)	Tap quickly 6 times when not connected to a mobile phone to clear mobile phone pairing records and TWS pairing records, then the earphones will power off automatically.

Power On: Automatically powers on when the charging case is opened



Power Off: Automatically powers off when placed into the charging case

